Bedienungsanleitung

Funk-Alarmanlagenset "FAS-5000"

Einführung

Geehrter Kunde, wir möchten Ihnen zum Erwerb Ihrer neuen Alarmanlage gratulieren!

Mit dieser Wahl haben Sie sich für ein Produkt entschieden, welches ansprechendes Design und durchdachte technische Features gekonnt vereint.

Lesen Sie bitte die folgenden Bedienhinweise sorgfältig durch und befolgen Sie diese, um in möglichst ungetrübten Genuss des Gerätes zu kommen!



Leistungsmerkmale

Mit diesem Alarmanlagenset ist eine Objektsicherung einfach zu bewerkstelligen. Steuerbar mit der Funkfernbedienung sorgt die Anlage mit ihrem Bewegungsmelder, den Fenster- bzw Türkontakten sowie ihrem Panikschalter für eine hohe Sicherheit in Heim, Büro oder Ladengeschäft.

Sicherheitshinweise

- Überprüfen Sie vor Inbetriebnahme das Gerät auf Beschädigungen, sollte dies der Fall sein, bitte das Gerät nicht in Betrieb nehmen!
- Lassen Sie Gerät nicht fallen. Es könnte bein Aufprall auf haretem Untergrund beschädigt werden.
- Testen Sie die Funktion der Anlage nach ihrer Installation.
- Vermeiden Sie die Installation an Orten mit starken Temperaturdifferenzen oder hoher Feuchtigkeit.
- Wichtig! Sollten das Gerät einmal beschädigt werden, lassen Sie es nur durch den Hersteller oder eine Fachwerkstatt instandsetzen.
- Lassen Sie das Verpackungsmaterial nicht achtlos liegen, Plastikfolien / -tüten, Styroporteile, etc., könnten für Kinder zu einem gefährlichen Spielzeug werden.
- Das Gerät gehört nicht in Kinderhände. Es ist kein Spielzeug.

Technische Daten:

Maße Haupteinheit: 238x130x55 mm, 570 g Betrieb Haupteinheit: AC 230V ~ 50 Hz Nennstrom Haupteinheit: max. 150 mA Schalldruckpegel Haupteinheit: 90 dB Maße Fernbedienung: 81x44x12 mm, 42g Betrieb Fernbedienung: 12 V (A23) Nennstrom Fernbedienung: max. 28 mA Reichweite Fernbedienung: max 30 m

Maße Notfallsender: 92x43x22 mm, 55 g Betrieb Notfallsender: 12 V (A23) Nennstrom Notfallsender: max. 40 mA Reichweite Notfallsender: max 30 m

Maße Tür/Fensterkontakt: 52x13x10 mm, 40 g Betrieb Tür/Fensterkontakt: 12 V (A23) Nennstrom Tür/Fensterkontakt: max. 8 mA

Maße Bewegungsmelder: 112x91x62 mm, 130 g

Betrieb Bewegungsmelder: 9 V (6F22) Nennstrom Bewegungsmelder: max. 50 mA Installationshöhe Bewegungsmelder: 2 m Sensorreichweite Bewegungsmelder: 12 m Sensorwinkel Bewegungsmelder: 110° Schutzart Bewegungsmelder: IP44 Maße Sirene: 75x80x60 mm, 295 q

Betrieb Sirene: DC 12 V

Nennstrom Sirene: max. 800 mA


Leistung Sirene: 20 W

Schalldruckpegel Sirene: 125 dB

Austrittsverzögerung: 0 s, 10 s oder 20 s Eintrittsverzögerung: 0 s, 10 s oder 20 s Arbeitsfrequenz: 433.05 – 434.79 MHz

Systempasswort: 0000

Die Kontrolleinheit und ihre Funktionen:

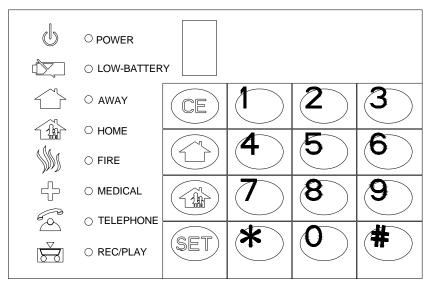


- POWER (LED): Betriebsanzeige.
- LOW-BATTERY (LED): Batteriestatus.
- AWAY (LED): Alarmanlage ist aktiv.
- HOME (LED): Nur


 Derinberiedermeeh
 - Peripheriealarmschleifen aktiv. FIRE (LED): Rauchmelder hat
- FIRE (LED): Rauchmelder hat angesprochen. (Alarmmeldung)
- MEDICAL (LED): Notfallsender wurde aktiviert. (Alarmmeldung)
- TELEPHONE (LED): Telefonverbindung ist aktiv.
- REC/PLAY (LED):
 Aufzeichnungsgerät ist aktiv.
 (Aufnahme oder Abspielen)
- Numerisches Display.
- CE (Taste): Zurück zum vorherigen Menpünkt / Verlassen des Menüs.

- SET (Taste): Öffnet das Einstellungsmenü.
- 🙀 (Taste): Aktiviert oder deaktiviert die Alarmanlage.
- (Taste): Aktiviert oder deaktiviert nur die Peripheriealarmschleifen.
- 0 9, *, # (Tasten): Zahlen- und Zeichensatz.

Die Fernbedienung und der Notfallsender und ihre Funktionen:

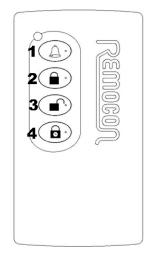

- 1. Panikalarmknopf.
- 2. Alarmanlage scharf schalten.
- 3. Alarmanlage entschärfen.
- 4. Alarmanlage scharf schalten mit 60 Sekunden Austrittsverzögerung.

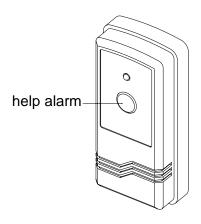


• Der Panikalarmknopf [1] der Fernbedienung sowie das Drücken des Notfallsenders aktiviert den akustischen Alarm sowie das Telefonwahlgerät, welches die gespeicherten Nummern anruft.


Installation der Alarmanlage:

Wichtiger Hinweis: Um sicherzustellen, dass die Alarmanlage korrekt arbeitet und für Ihre Bedingungen optimal eingestellt ist, wird empfohlen, deren Installation von Fachpersonal durchführen zu lassen!

a) Die Haupteinheit

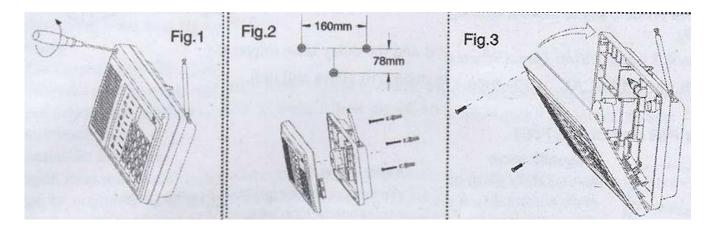

- Lösen sie die Schrauben auf der Vorderseite der Haupteinheit.
- Benutzen Sie die Löcher der Rückseite als Schablone für die drei Bohrpunkte.
- Bohren Sie die drei Löcher, deren Abstände zueinander der obigen Zeichnung zu entnehmen sind.
- Setzen Sie die Dübel ein.
- Drehen Sie die Schrauben bis ca. 5 mm in die Wand.
- Entfernen Sie die Kappen der Löcher für die Leitungen und schließen Sie das Netzteil, die Sirene und ggf. die Telefonleitung an.
- Befestigen Sie die Rückseite an der Wand.
- Schließen Sie den internen 12 V-Akkumulator an (Damit ist das Gerät aktiv).
- Setzen Sie das Fronteil wieder auf und schrauben es fest.

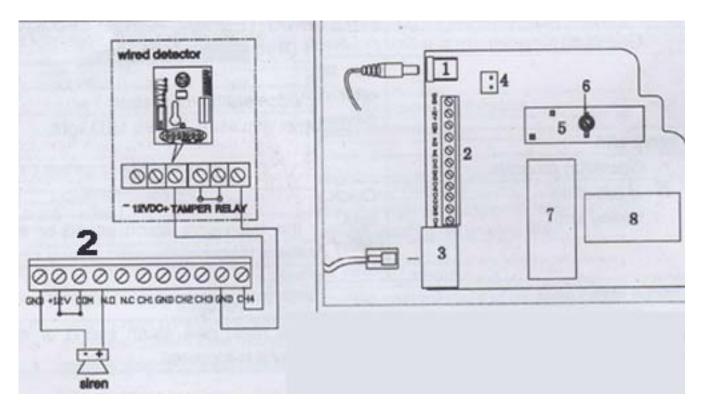



P2010 © Firma WJG, Braunschweig. Nachdruck oder Vervielfältigung nur mit ausdrücklicher Genehmigung

- 1. Anschluss für das Netzgerät.
- 2. Anschlussterminal für nicht funkgesteuerte Peripheriegeräte.
- 3. Anschluss für ein Telefonkabel.
- 4. Anschluss für den DC 12 V ~ 300 mAh-Akkumulator.
- 5. Funkempfänger.
- 6. Einstellbare Induktivität.
- 7. Prozessor.
- 8. Sprachmodul.

Achtung: Wenn die Haupteinheit ohne einen Telefonanschluß aktiviert wird, ertönt ca alle 30 Sekunden ein akustisches Warnsignal, welches durch die Eingabe von * -> "PASSWORT" -> 5 -> 2 -> 0 abgeschaltet werden kann.

b) Die zweiteiligen Magnetkontakte für Tür und Fenster

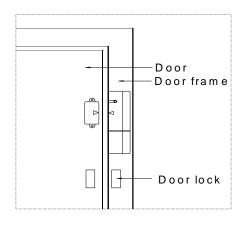

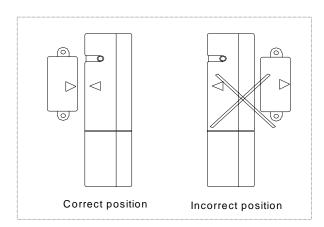


- Fügen Sie, unter Beachtung der korrekten Polarität, die Batterie in den Sensor ein.
- Die beiden Teile der Kontake müssen jeweils senkrecht an der Anschlagseite von Tür und Türrahmen oder Fenster und Fensterrahmen befestigt werden, wobei das größere Teil (Sender) immer an den Rahmen gehört.
- Der Magnet muß immer zur linken Seite des Senders angebracht werden.
- Ihr Abstand voneinander darf im geschlossenen Zustand nicht mehr als 5 mm betragen.
- Achtung: Die Kontakte sollten nicht auf metallenden Untergrund angebracht werden.

c) Der Bewegungsmelder



- Fügen Sie, unter Beachtung der korrekten Polarität, die Batterie in den Sensor ein.
- Setzen sie den Bewegungsmelder in ca. 2 m Höhe an die Wand an.
- Benutzen Sie die Löcher seines Halters als Schablone für die Bohrpunkte.
- Bohren Sie die Löcher.
- Setzen Sie die Dübel ein.
- Schrauben Sie den Halter an der Wand fest.
- Nun befestigen Sie den Bewegungsmelder an seinem Halter.
- Achtung: Der Bewegungsmelder sollten nicht auf metallenden Untergrund angebracht werden.
- Der Bewegungsmelder hat an der Unterseite einen Drehknopf (ON/OFF), mit dem man ihn separat aus- oder einschalten kann.

Der Sensorbereich des Bewegungsmelders:

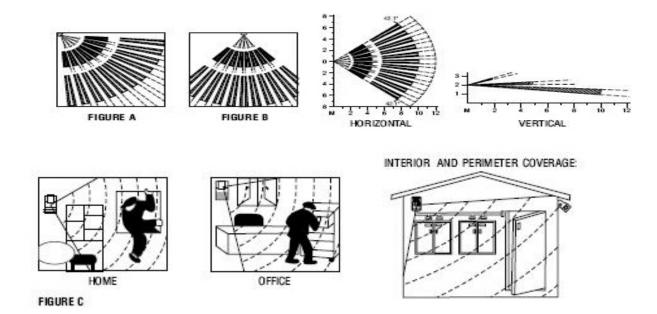

Achtung: Sollte die Betriebsspannung der Batterie unter 7 V fallen, zeigt die rote Leuchtiode des Bewegungsmelders an.

Programmierung:

Um Einstellungen am System vorzunehmen benötigt man das "PASSWORT", welches vom Werk her <0000>.

Nachdem die Anlage erfolgreich angschlossen ist und angeschaltet wurde sollten die Leuchtdioden POWER (grün) und AWAY (grün) anzeigen.

Ferner beginnt das Gerät auf dem numerischen Display einen Countdown von 9 bis 0 anzuzeigen.

Nachdem der Countdown abgelaufen ist gibt man die Sequenz * -> "PASSWORT" -> SET ein, um in das Einstellungsmenü zu gelangen.

Hier kann man Einstellungen gemäß dem unten angegegebenen Schaltprinzip vornehmen.

Mit der Taste CE kann man zum vorherigen Menüpunkt zurückkehren.

Nach 20 Sekunden Inaktivität wird das Einstellungsmenü automatisch verlassen.

Achtung!: Sollte nach Ablauf des Countdowns Alarm ausgelöst werden, so geben Sie folgende Sequenz ein: * - > "PASSWORT" -> SET -> 9 -> 5. Dies ist ein Reset der verkabelten Sensoren, der den Alarm erstummen läßt.


Neues Passwort: Um das Passwort zu ändern gebe ein: * -> "PASSWORT" -> 8. Jetzt gibt man das gewünschte Passwort zweimal hintereinander ein. Dann wird das neue Passwort auf numerischen Display abgespielt . Fertig.

Das Einstellungsmenü:

Um sich in dem Funktionsmenü zu bewegen oder Eingaben zu bestätigen drückt man eine der zur Auswahl gestellten Zifferntasten.

Die Schaltungen des Funktionsmenüs sehen im Überblick folgendermaßen aus:


Das Funktionsmenü

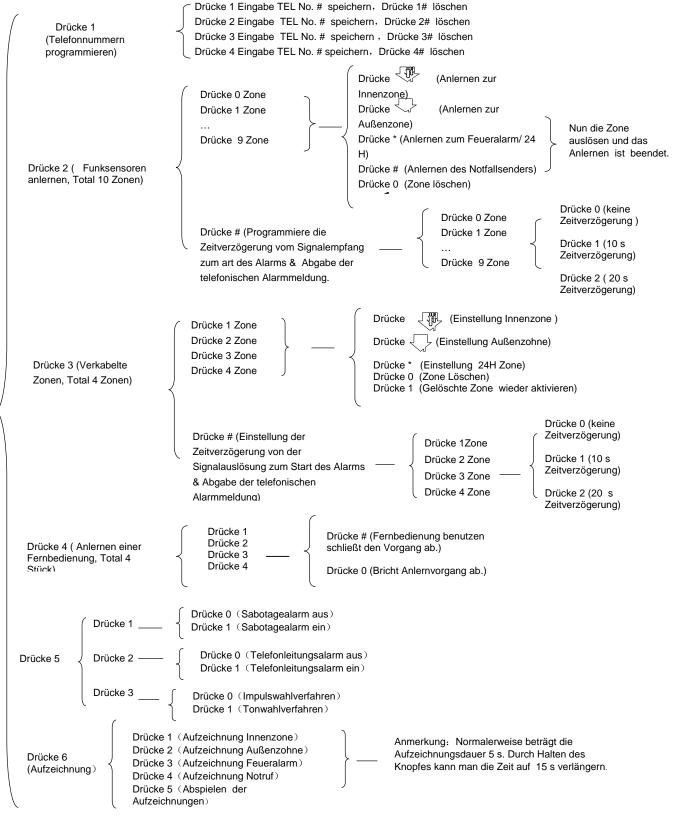

Drücke 7: Anlage wird entschärft

Drücke 8: Passwort ändern: Gebe das neue 4- stellige Passwort zweimal hintereinander ein.

Drücke : Abwesenheitsalarm: Innen- und Außenzone sind aktiv. — { Drücke 0 (Sofortige Scharfstellung) Drücke 1 (Zeitverzögerte Scharfstellung)

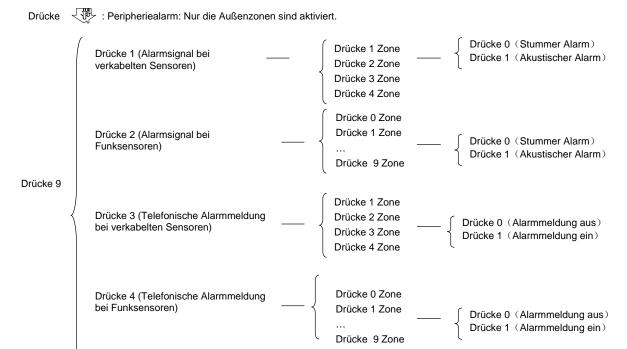

Anmerkung: Mit der Taste CE kommt man im Menü zurück.

Das Anlernen bzw. Verbinden der Sensoren mit der Kontrolleinheit:

Es gibt zwei Arten von Sensoren.

a) Die funkgesteuerten Sensoren, wie Fernbedienung, Notfallsender, Bewegungsmelder, Tür- und Fensterkontakte.

Drücke 5 und die verkabelten Sensoren werden in den Ausgangszustand zurückversetzt.

b) Die kabelgebundenen Sensoren wie Glassbruchdetektoren, Rauchmelder und Wärmedetektor.

Zu a)

Damit die Sensoren und die Fernbedienungen auf separaten Frequenzen mit der Haupteinheit kommunizieren und auch fehlerfrei erkannt werden können, müssen sie korrekt eingestellt werden. Dies geschieht durch DIP-Schalter, die sich in den Geräten befinden.



An jedem der beteiligten Geräte muß eine individuelle ON/OFF-Kombination der 8 Schalter eingestellt werden. Am einfachsten wäre also z.B. Tür-/Fensterkontakten 1: 1 = ON & 2 bis 8 = OFF; Tür-/Fensterkontakten 2: 2 = ON & Rest = OFF usw.

Jede DIP-Kombination entspricht einem Funkkanal.

Stellen Sie sicher, dass keine DIP-Schalterkombination doppelt vorkommt.


Jetzt kann man alle gewünschten Sensoren mit der Haupteinheit folgendermaßen verbinden:

* -> SET -> 2 -> 1 ->
$$\bigcirc$$
 -> (Sender ein- & auschalten) -> 2x CE (Sender 1 ist nun verbunden) ->...

* -> SET -> 2 -> 2 -> \bigcirc -> (Sender ein- & auschalten) -> 2x CE (Sender 2 ist nun verbunden) -> ...usw.

Auch der Funkbewegungsmelder besitzt einen DIP-Schalter.


Beim Bewegungsmelder läßt sich zusätzlich mit einem Jumper (AUTO/1) festlegen, ob das Signal zur Alarmanlage schon beim ersten Erkennen einer Bewegung gesendet wird (Sense one to emit) oder erst dann, wenn eine zweite Bewegung in einem bestimmten Abstand folgt (Sense twice to emit). Den Zeitabstand zwischen beiden Messungen muss wenigstens 15 Sekunden betragen. Diese zweite Möglichkeit soll die Wahrscheinlichkeit von Fehlalarmen minimieren.

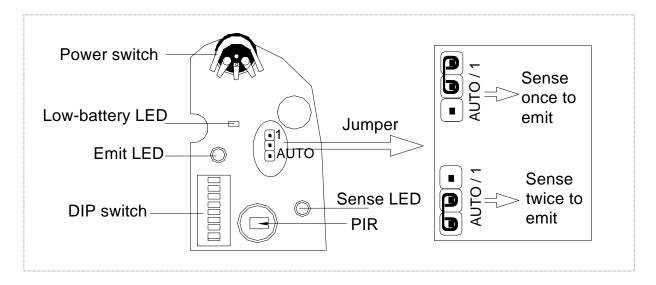

Der Notfallsender (MEDICAL) hat einen fest vorprogramierten Kanal und wird beim Programmieren automatisch automatisch von der Kontrolleinheit gefunden.


Zu b)

Um kabelgebundene Sensoren mit der Kontrolleinheit zu verbinden, befindet sich in jedem der Geräte ein Anschlussterminal:

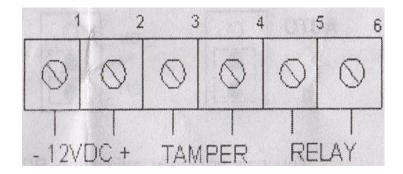

- -12VDC+: Verbindung mit dem Stromnetz.
- TAMPER: Sabotagealarm. Wird mit der Kontrolleiheit verbunden. Wird das Gerät geöffnet löst es einen Alarm aus.
- RELAY: Signalausgang zur Kontrolleinheit.

Zusätzlich kann es ein Jumperterminal geben zur Aktivierung / Deaktivierung seiner Leuchtdiode geben:

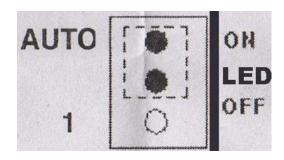

- AUTO: Die Leuchtdiode ist aktiv und leuchtet im Falle eines Alarms.
- 1: Die Leuchtdiode ist inaktiv.

Der Funktionstest der Alarmanlage (Walk-Test):

- Nach der kompletten der Alarmanlage, betätigen Sie die Taste [2] der Fernbedienung.
- Jetzt ist die Alarmanlage inklusive des Bewegungsmelders aktiviert (AWAY).
- Bewegen Sie sich jetzt innerhalb des Bereiches der Bewegungsmelders.
- Der Bewegungsmelder wird Ihre Anwesenheit registrieren und sendet der Haupteinheit ein Signal.
- Nach Ablauf der Eintrittsverzögerung beginnen sowohl die integrierte Sirene der Haupteinheit als auch die externe Piezosirene Alarm zu schlagen.
- Wenn Sie nur die Peripheriealarmschleifen (HOME) aktiviert haben, öffen Sie eines der gesichterten Fenster und sowohl die Sirene der Haupteinheit als auch die externe Piezosirene beginnen Alarm zu schlagen.
- Sie können den Alarm vorzeitig durch Eingabe des Passwortes abbrechen.

Grundsätzlich sollte man nicht direkt von der HOME-Funktion zur AWAY-Funktion, oder umgekehrt, schalten. Dies kann zu Störungen in der Alarmanlage führen, d.h. vor dem Umschalten immer entschärfen. Am besten mit Taste [3] der Fernbedienung.

Betrieb der Alarmanlage:

Nach erfolgter Installation und Programmierung kann man die Alarmanlage mit Hilfe der Haupteinheit, der Fernbedienungen sowie des Notfallsenders nutzen und bedienen. Folgende Funktionen sind evident.

- <u>Die Alarmanlage scharf stellen:</u> Drücken Sie auf Taste [2] der Fernbedienung oder AWAY der Kontrolleinheit, um die Anlage zu aktivieren. Die Leuchtdiode AWAY zeigt an und die Kontrolleinheit quittiert mit einem akustischen Signal. Nun hat man die Dauer der im Einstellungsmenü festgeleten Austrittsverzögerung zur Verfügung, um den überwachten Bereich zu verlassen, ohne Alarm auszulösen. Alternativ kann man die Anlage auch mit Taste [4] der Fernbedienung scharfstellen und hat dann automatisch 60 Sekunden Austrittsverzögerung. Beim Umstellen aus dem unscharfen Modus gilt die Eingabe * -> "PASSWORT" -> SET -> -> 0.
 <u>Die Alarmanlage entschärfen:</u> Drücken Sie auf Taste [3] der Fernbedienung oder geben Sie * ->
- <u>Die Alarmanlage entschärfen</u>: Drücken Sie auf Taste [3] der Fernbedienung oder geben Sie * -> "PASSWORT" -> SET -> 7 an der Kontrolleinheit ein, um die Anlage zu deaktivieren. Im zweiten Fall beachten Sie, dass Sie nur die Dauer der im Einstellungsmenü fesgelegten Eintrittsverzögerung zur Verfügung haben, um das Passwort einzugeben, ohne Alarm auszulösen.
- <u>Nur die Peripheriealarmschleifen aktivieren</u>: Drücken Sie HOME der Kontrolleinheit, um die Alarmanlage ohne den Bewegungsmelder zu aktivieren. Die Leuchtdiode AWAY zeigt an die Kontrolleinheit quittiert mit einem akustischen Signal. Nach Ablauf eingestellten Austrittszeit wird Alarm ausgelöst, wenn man einen Tür- oder Fensterkontakt öffnet. Ansonsten können Sie sich innerhalb des überwachten Bereiches frei bewegen. Beim Umstellen aus dem unscharfen Modus gild die Eingabe: * -> "PASSWORT" -> SET -> 🖓 .
- <u>Panikalarm aktivieren</u>: Drücken Sie Taste [1] der Fernbedienung oder den Knopf des Notfallsenders, um einen sofort einsetzenden Alarm auszulösen und die Kontrolleinheit die Telefonzentrale anrufen zu lassen. Die Leuchtdiode MEDICAL sollte anzeigen.
- Alarm abschalten: Eingabe der Sequenz * -> "PASSWORT" -> SET -> 7. Jetzt ist die Anlage nicht mehr scharf. * -> "PASSWORT" -> SET -> > 0 -> CE. Jetzt zeigt das Display nicht mehr an.
 Alarmmeldung per Telefon erhalten: Die Alarmanlage wählt die von Ihnen einprogrammierte
- Alarmmeldung per Telefon erhalten: Die Alarmanlage wählt die von Ihnen einprogrammierte
 Telefonnnummer und ggf. auch bis zu drei Alternativnummerm an und gibt seine Alarmmeldung ab.
 Werden Sie von der Alarmanlage angerufen, können Sie mit Hilfe der [Numeriktasten] Ihres Telefons
 folgende Schaltungen vornehmen: [*] = Der Alarm wird abgeschaltet und man kann mit Hilfe des
 integrierten Mikrofons in den Raum hineinhören. Um fortlaufend Abzuhören betätigt man erneut *,
 wenn ein akustisches Signal ertönt. Andernfalls wird die Verbindung unterbrochen. / [0] = Der Alarm
 wird abgeschaltet und die Verbindung unterbrochen. / [#] = Die Verbindung wird unterbrochen und die Alarmanlage
 entschärft.
- Fernbedienung der Alarmanlage über das Telefon: Wenn man den Anschluss der Alarmanlage anruft, kann man sie fernsteuern, indem man zunächst [*] und dann das [PASSWORT] eingibt. Jede korrekte Eingabe wird von der Alarmanlage mit einem Ton quittiert, eine Fehleingabe mit mehreren Tönen. [0] = Verbindung unterbrechen. / [9] = Peripheriealarmschleifen (HOME) scharfstellen. / [6] Alarmanlage scharfstellen. / [7] = Alarmanlage entschärfen. / [#] = Alarm auslösen und Verbindung unterbrechen. / [*] = Mit Hilfe des integrierten Mikrofons in den Raum hineinhören. Wenn ein akustisches Signal ertönt kann man [*] = Weiterhören. / [0] = Auflegen. / [#] = Auflegen und Alarm auslösen. / [1] = Zurück zur vorherigen Funktion.

Reference Manual

RC-controlled Alarm-System "FAS-5000"

Preface

Dear Customer, we like to congratulate you on the purchase of your new alarm-system!

You have chosen a product which combines deliberate technical features with an appealing design.

Please read this manual conscientiously and carry out the given instructions before and while you are using your new device.



Capability Characteristics

With this alarm-system-set you manage to keep any room safe easily.

Operate the system by using the radio remote control. The device will provide a high degree of security with its motion sensor, the magnetic contacts and the panic-button. Ideal for home, office or shop.

Security Advices

- Before using the device, please check it for any possible damages. In case of damage do not operate it.
- Dropping on hard floor may cause a damage on the device.
- Do not forget to test the function of the device after installation.
- Do not install the main device at places with strong fluctuation of temperature or humidity.
- Caution! Should the device itself get damaged, please let the repair to the manufacturer or to a qualified service agent.
- Please dispose packaging materials properly and do not let play children with it.
- The device itself is no toy either. Do not let children play with it too.

Technical Specifications:

Size Main Unit: 238x130x55 mm, 570 g Operation Main Unit: AC 230V ~ 50 Hz

Rated Current: max. 150 mA Sound Pressure Main Unit: 90 dB

Size Remote Control: 81x44x12 mm, 42g Operation Remote Control: 12 V (A23) Rated Current Remote Control: max. 28 mA

Range Remote Control: max 30 m Size Help Alarm: 92x43x22 mm, 55 g Operation Help Alarm: 12 V (A23) Rated Current Help Alarm: max. 40 mA

Range Help Alarm: max 30 m

Size Magnetic Contact: 52x13x10 mm, 40 g Operation Magnetic Contact: 12 V (A23) Rated Current Magnetic Contact: max. 8 mA Size Motion Detector: 112x91x62 mm, 130 g Operation Motion Detector: 9 V (6F22)

Rated Current Motion Detector: max. 50 mA

Installation Height: 2 m

Sensor Range Motion Detector: 12 m Sensor Angle Motion Detector: 110° IP-Code Motion Detector: IP44 Size Siren: 75x80x60 mm, 295 g

Operation Siren: DC 12 V

Rated Current Siren: max. 800 mA


Power Siren: 20 W

Sound Pressure Siren: 125 dB Exit Delay: 0 s, 10 s or 20 s Entry Delay: 0 s, 10 s or 20 s

Working Frequency: 433.05 - 434.79 MHz

System Password: 0000


The Main Unit and its Functions:

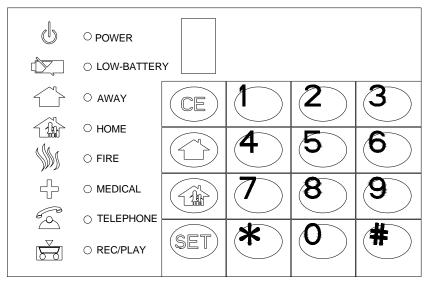


- SET (key): Opens the adjustment menu.
- 🙀 (key): Activates or deactivates the alarm system.
- (key): Activates or deactivates only the periphery alarm strips.
- 0 9, *, # (keys): Numbers and character set.

- POWER (LED): Operation Display.
- LOW-BATTERY (LED): Battery status.
- AWAY (LED): Alarm system is activated.
- HOME (LED): Only periphery alarm strips are activated.
- FIRE (LED): Smoke detector has responded. (Alarm message)
- MEDICAL (LED): Help alarm has been activated. (Alarm message)
- TELEPHONE (LED): Telephone line has been connected.
- REC/PLAY (LED): Recorder is activated. (Recording or playback)
- · Numerical display.
- CE (key): Return to the previous menu item / leaving the menu.

The Remote Control and the Help Alarm Emitter and their Functions:

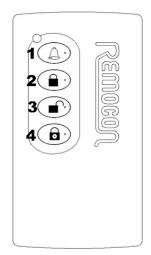

- 1. Panic alarm button.
- 2. Arms the alarm system.
- 3. Disarms the alarm system.
- 4. Arms the alarm system with an entry delay of 60 seconds.

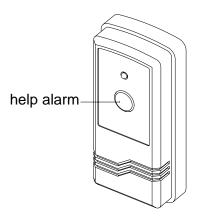


• The panic alarm button [1] of the remote control and the help alarm activate an acoustic alarm as well as the calling device which dials the saved numbers.


Installation of the Alarm System:

Important notice: To make sure that the alarm system is working correctly and is optimal adjusted it is highly recommended to let its installation to a professional!

a) The main unit

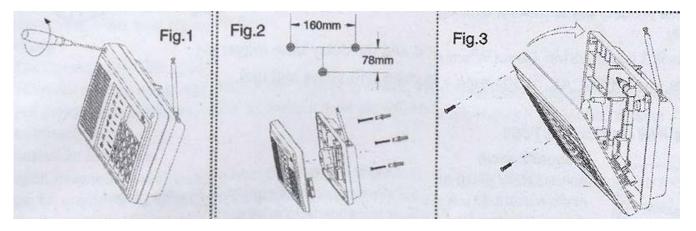


- Release the screws of the front panel of the main unit.
- Use the holes of the backside as a positioning device for the three drill holes.
- Drill the three holes which distances to each other can be read from the drawing above.
- Insert the wall plugs into the holes.
- Insert the screws into the wall but leave about 5 mm standing out.
- Remove the covers of the holes for the wires and connect the power supply, the siren and as the case may be the telephone line.
- Mount the backside to the wall.
- Connect the internal 12 V-accumulator (Now the device is activated).
- Put the front panel on the backside and tighten its screws.

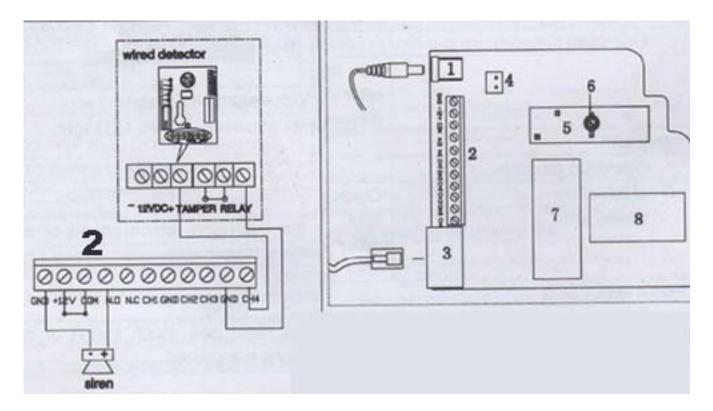


- 1. Connector for the power supply.
- 2. Connection terminal for non radio controlled peripheral devices.
- 3. Connector for the telephone line.
- 4. Connector for the DC 12 V ~ 300 mAh accumulator.
- 5. Receiver.
- 6. Adjustable inductance.
- 7. Central pocessing unit (CPU).
- 8. Voice recording module.

Attention: If the main unit will be activated without connecting a telephone line an acoustic warning signal will sound about every 30 seconds. This signal can be switched off by entering * -> "PASSWORD" -> 5 -> 2 -> 0.

b) The two-part magnetic contacts for windows and doors

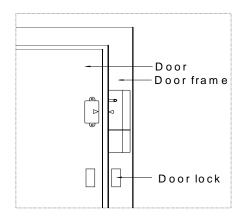

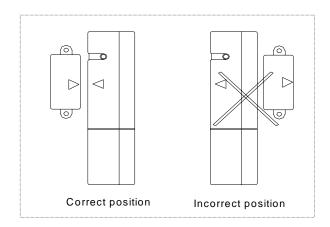


- By considering the correct polarity insert the battery into the sensor.
- The two pieces of each contact must be fastened perpendicularly at the attaching point of door and its frame or window and its frame. Make sure to mount the bigger part (emitter) to the frame.
- The magnet must be installed to the left side of the emitter.
- If the window or door is closed the distance of the two pieces from each other should not be more than 5 mm
- Attention: Do not install the magnetic contact on a metal surface.

c) The motion detector



- By considering the correct polarity insert the battery into the sensor.
- Hold the motion detector to the wall in about 2 m of height.
- Use the holes of the holder as a positioning device for the two drill holes.
- · Drill the holes.
- Insert the wall plugs.
- Mount the holder to the wall.
- Now fasten the motion detector to its holder.
- Attention: Do not install the motion detector on a metal surface.
- The motion detector has a rotary switch (ON/OFF) situated at the bottom for turning the device on or off separately.

The sensor range of the motion detector:

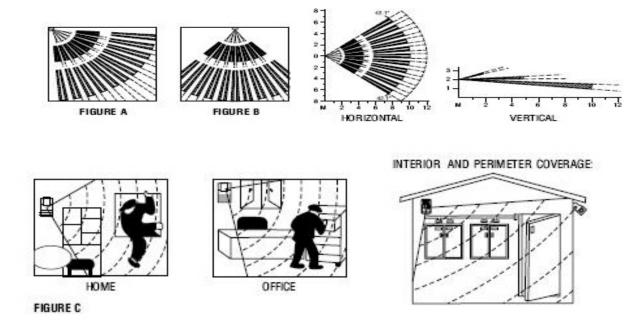

Attention: Should the operating voltages fall under 7 V the red LED of the motion detector will show.

Programming:

For adjusting the system the system password is needed. Its factory setting is <0000>.

After the system was installed successfully and switched on the LEDs POWER (green) and AWAY (green) should show.

Furthermore on the numerical display a countdown from 9 to 0 is starting.

After the countdown is done enter the sequence * -> "PASSWORD" -> SET for opening the adjustment menu. Here set the parameters as desired according to the diagram below.

Use the button CE to return to the previous menu item.

After 20 seconds of inactivity the adjustment menu will be left automatically.

Attention!: Should an alarm be raised after the end of the countdown enter the following sequence: * -> "PASSWORD" -> SET -> 9 -> 5. This is a reset of the wired sensors which should end the alarm.

A new password: For changing the password enter the sequence: * -> "PASSWORD" -> SET -> 8. Now enter the desired new password twice. If the new password will be shown on the numerical display this setting is done.


The Function Menu:

For moving inside the function menu or to confirm inputs press the numerical key according to the diagram.

The diagram of the adjustment menu looks like this:

Function setting menu Press 1 input TEL No. # to save, press 1# to delete Press 2 input TEL No. # to save, press 2# to delete Press 1 (set Press 3 input TEL No. # to save, press 3# to delete telephone Press 4 input TEL No. # to save, press 4# to delete number) (study to Press 0 zone Press 1 zone press __ (study to Then trigger the outdoor zone) Press 9 zone zone and to finish press * (study to fire alarm/ 24 Press 2 (study wireless the study. zone, total 10 zones) H) press # (study to medical alarm) Press 0 (no time-delay) Press 0 zone Press # (set the time-delay from Press 1 zone Press 1 (time-delay is 10 s) receiving signal to starting alarm and dial) Press 2 (time-delay is 20 s) Press 9 zone (set to indoor zone) Press 1 zone (set to outdoor zone) Press 2 zone Press 3 zone Press * (set to 24HR zone) Press 3 (Set wired Press 4 zone Press 0 (delete zone) zone, total 4 zones) Press 1 (resume deleted zone) Press 0 (no time-delay) Press 1 zone Press # (set the time-delay from Press 2 zone Press 1 (time-delay is 10 s) receiving signal to starting alarm and Press 3 zone Press 2 (time-delay is 20 s) dial) Press 4 zone Press 1 Press # (trigger the remote control to finish Press 2 Press 4 (study remote the study. Press 3 control, total 4 pcs) Press 4 Press 0 (delete study) Press 0 (tamper alarm off) Press 1 (tamper alarm on) Press1 Press 0 (Tel wire path trouble alarm off) Press 5 Press2 Press 1 (Tel wire path trouble alarm on) Press 0 (pulse dialling) Press3 Press 1 (tone dialling) NOTE: Press the key and the record Press 1 (indoor zone record) time is 5 s; if you want to keep on Press 2 (outdoor zone record) Press 6 recording, you should press and hold (record) Press 3 (fire alarm record) the key, the record time is 15sec. Press 4 (medical zone record) Press 5 (play all records) Press 7: disarm Press 8: Modify password by entering the new 4-bit password twice. : Arms the system: indoor and outdoor zone armed. Press 0 (immediately armed) Press 1 (time-delay armed)

Arms the home zone: only the outdoor zone is armed, the indoor zone not.

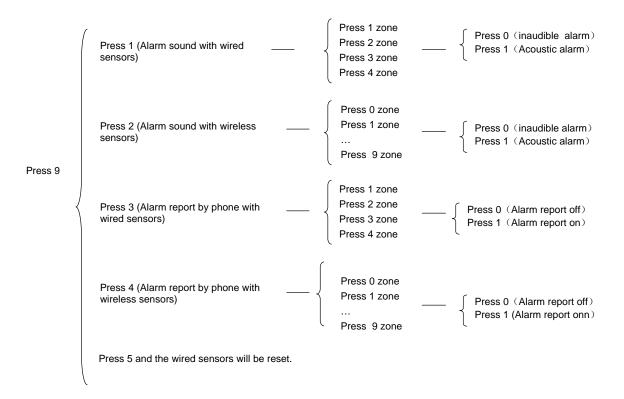

NOTE: For returning to main menu use CE.

The Training respectively the Connection of the Sensors with the Main Unit:

There are two kinds of sensors.

- The wireless sensors like remote control help alarm, motion detector and magnetic contacts for doors and windows.
- b) The wired sensors like glass breaking detector, smoke detector or heat detector.

To a)

To let all sensors and the remote controls use separate frequencies to communicate with the main unit accurate they must set up correctly.

For this purpose use the DIP-switches which are situated in the devices.



Every participating magnetic contact needs an individual ON/OFF-combination of the 8 switches. The easiest way would be Magnetic contact 1: 1 = ON & 2 to 8 = OFF; Magnetic contact 2: 2 = ON & Rest = OFF etc. Every DIP-combination complies with another channel.

Make sure no DIP-switch combination exists more than once.


Now connect all desired sensors as follows:

```
* -> SET -> 2 -> 1 -> \bigcirc -> (Switch sensor on & off) -> 2x CE (Sensor 1 is connected) ->...
```

* -> SET -> 2 -> 2 -> \bigcirc -> (Switch sensor on & off) -> 2x CE (Sensor 2 is connected) ->...usw.

The radio controlled motion detectors have a DIP-switch also.


Additionally it is possible to adjust if a signal from the motion detector should be transmitted immediately when a motion is detected (Sense one to emit) or not until a second motion is detected in a determined period of time (Sense twice to emit). The time interval between two detections should be 15 seconds at least. The second case should minimise the chances of false alarms. For this adjustment use the jumper (AUTO/1).

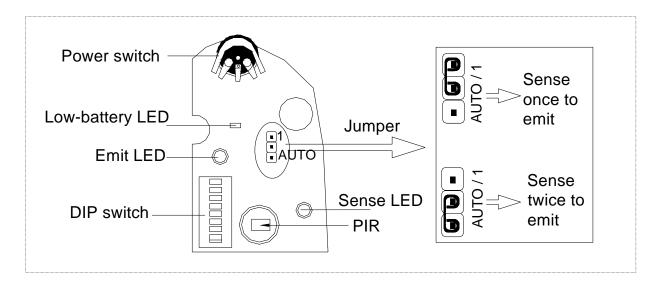

The help alarm emitter (MEDICAL) has a hard-coded frequency while the remote controls finding the correct channels automatically by coupling.


To b)

For connecting wired sensors with the main unit there is a terminal situated in every device:

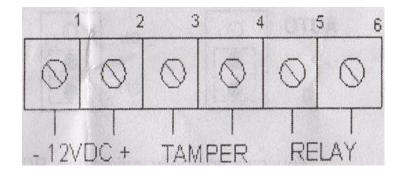

- -12VDC+: Connector for the power supply.
- TAMPER: Tamper alarm. Is also connected to the main unit and raises alarm when the sensor should be opened.
- RELAY: Signal output to the main unit.

Additionally some devices have a jumper terminal for activating / deactivating its LED:

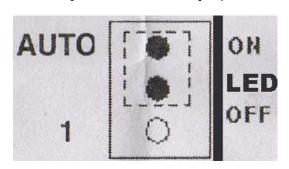

- AUTO: The LED is activated and ready to operate in case of an alarm.
- 1: The LED is not activated.

Functional Test of the Alarm-System (The Walk-Test):

- After the installation of the alarm system use button [2] of the remote control.
- Now the alarm system is armed and activated inclusive the motion detector.
- Move in the monitored range of the motion detector.
- The motion detector will recognize your presence and transmits a signal to the main unit.
- After the expiration of the entry delay the integrated siren of the main unit as well as the piezo-siren raises the alarm.
- If only the periphery alarm strips are activated open a saved door or window now the sirens should give
- Break-up the alarm instantly by entering the user password at the main unit.

As a basic principle do not switch the alarm-system from the HOME ARM-mode to the AWAY ARM-mode (or vice versa) directly. This can cause operational problems. Just use the button [3] of the remote control always before you activate another mode.

Operation of the Alarm System:

After the installation and the programming of the system it can be operated by the main unit, the remote controls and the help alarm emitter.

Following functions are evident.

- <u>Arming of the alarm system:</u> Press button [2] of the remote control or AWAY of the main unit to activate the system. The LED AWAY shows and the main unit acknowledges with an acoustic signal. During the adjusted exit delay it is possible to leave the monitored area without raising an alarm. Alternatively arm the alarm system by using button [4] of the remote control. In that case there is an exit delay of 60 s automatically. For switching from disarmed mode enter * -> "PASSWORD" -> SET -> \ -> 0.
- <u>Disarming of the alarm system</u>: Press button [3] of the remote control or enter the sequence * -> "PASSWORD" -> SET -> 7 at the main unit to deactivate the system. The display shows [DISARM ST] and the main unit acknowledges with an acoustic signal. In the second case make sure to enter the password during the time of the entry delay. Otherwise the alarm is rising.
- Activating only the periphery alarm strip: Press HOME of the main unit to activate the alarm system without the motion detector. The LED AWAY shows and the main unit acknowledges with an acoustic signal. After the expiration of the adjusted exit delay the alarm raised if a magnetic contact on door- or window opens. But in this mode it is possible to move freely inside the monitored area. For switching from disarmed mode enter * -> "PASSWORD" -> SET -> \$\sqrt{10}\$.
- <u>Activating the help alarm</u>: Press button [1] of the remote control or the help alarm emitter to raise an alarm instantly. Furthermore the main unit will dial the number of the guarding station. The LED MEDICAL shows.
- Stopping the alarm: Entering the sequence * -> "PASSWORD" -> SET -> 7. Now the system is disarmed. * -> "PASSWORD" -> SET -> 0 -> CE. Now the display is cleared.
 Getting an alarm report via telephone: The alarm system is calling the programmed number and as the
- Getting an alarm report via telephone: The alarm system is calling the programmed number and as the case may be up to three alternative numbers to leave its alarm messages. If you got a call from your alarm system use the [numeric keys] of your telephone to control it: [*] = The alarm will be stopped and you can listen into the room with the integrated microphone. If you hear an acoustic signal press * for continuing the monitoring. Otherwise the line will be disconnected. / [0] = The alarm will be stopped and the line will be disconnected. / [#] = The line will be disconnected but the alarm will not being stopped. / [7] = The line will be disconnected and the alarm system disarmed.
- Remote controlling of the alarm system via telephone: Call the number of the line to which the alarm system is connected press [*] and enter the [PASSWORD]. Every correct input will confirmed by the alarm system with an acoustic signal. A false input will be indicated by multiple signals. [0] = Disconnect the line. / [9] = Arm the periphery alarm strips (HOME). / [6] Arm the alarm system. / [7] = Disarm the alarm system. / [#] = Start an alarm and disconnect the line. / [*] = Use the integrated microphone for listening into the room. If an acoustic signal sounds use [*] = Continue the monitoring. / [0] = Hanging up. / [#] = Disconnect the line and raise the alarm. / [1] = Return to the previous function.